


Makino Pro 5 Remote Machining Uninstall Guide

This procedure will disable and remove all Remote Machining products from your Makino Pro5 Mill.

## Step #1. Disable Remote Machining Startup

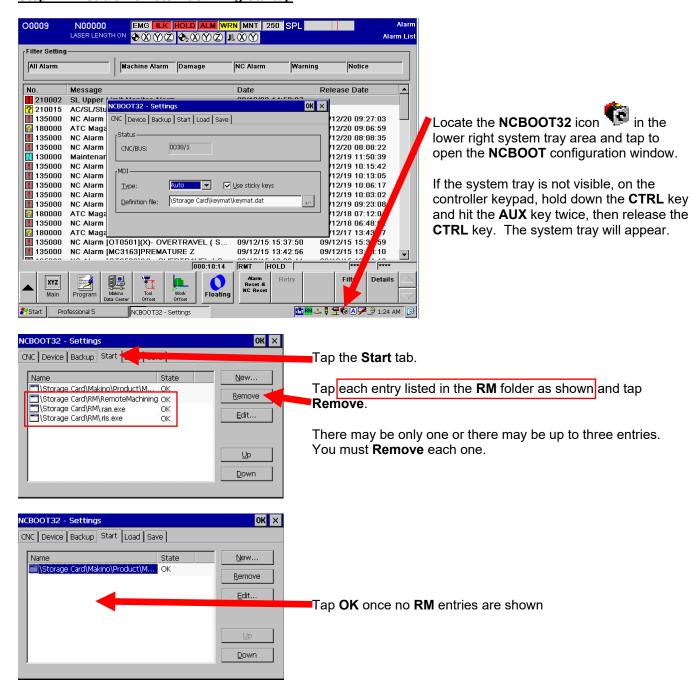


## Step #2. Shutdown/Exit/Remove Remote Machining Makino Pro5 Applications

**Remote Machining** 


Locate any **Remote Machining Makino Pro5** applications running in the system tray in the lower right corner of the controller screen. If the system tray is not visible, on the controller keypad, hold down the **CTRL** key and hit the **AUX** key twice, then release the **CTRL** key. The system tray will appear.

Remote Light Stack Notifier

**Remote Alarm Notification** 

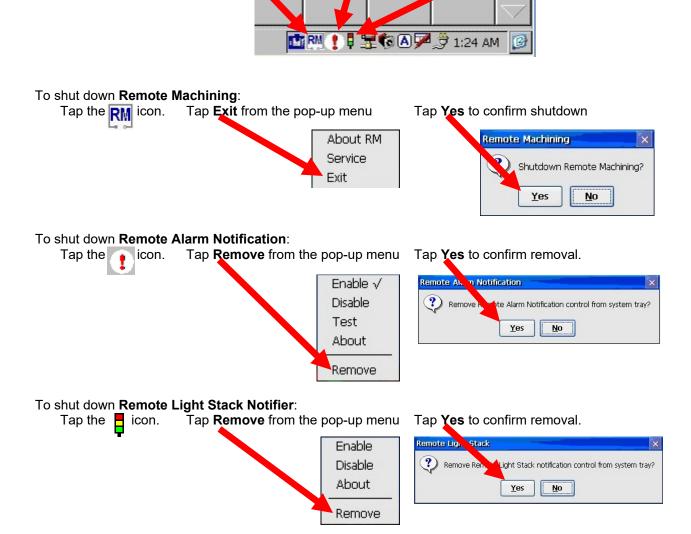

## Step #3. Remove Remote Machining Application Folder

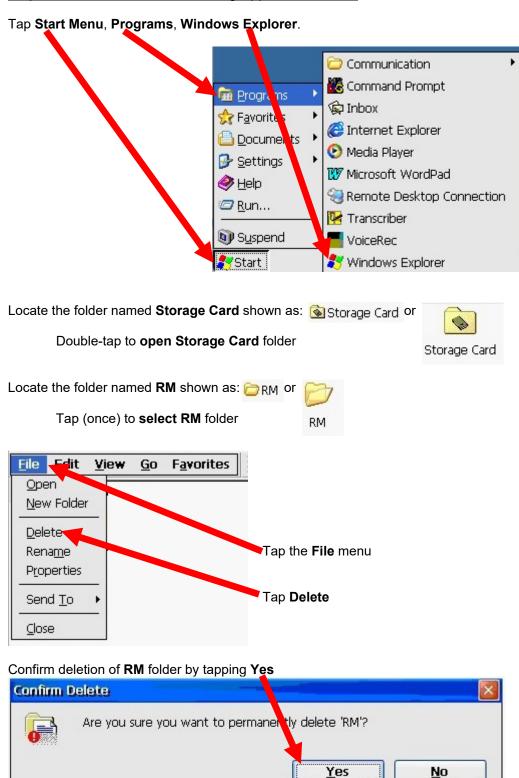

The uninstall is now complete.